

LUCAS

Quality

EQUIPMENT & SPARE PARTS



1957 B.S.A. & SUNBEAM MOTOR CYCLES

B.S.A.

70 c.c. 'Dandy'; 125 c.c. D1 'Bantam'; 150 c.c. D3 'Bantam Major';
250 c.c. C10L; 250 c.c. C12; 350 c.c. B31; 350 c.c. B32 Competition; 350 c.c. B32GS 'Gold Star';
500 c.c. B33, 500 c.c. B34 Competition; 500 c.c. B34GS 'Gold Star'; 500 c.c. M33; 600 c.c. M21;
500 c.c. A7 Twin; 500 c.c. A7SS 'Shooting Star' Twin; 650 c.c. A10GF 'Golden Flash'; 650 c.c. A10RR 'Road Rocket'

SUNBEAM 500 c.c. S7 & S8

JOSEPH LUCAS (SALES & SERVICE) LTD • BIRMINGHAM 18 • ENGLAND

EQUIPMENT SPECIFICATIONS AND PAGE INDEX

(For B.S.A. "DANDY" see pages 10 and 11)

UNIT	For details or illustrations see Page No.	Bantam D1 & D3 (Rectified Lighting) & C10L		C1		B. & M. Models except B32 & B34 "Gold Star"		B32 & B34 "Gold Star"	
		Model	Part No.	Model	Part No.	Model	Part No.	Model	Part No.
ALTERNATOR	8	—	—	RM13/15	047523	—	—	—	—
AMMETER	8	—	—	CZU27	36084F	—	—	CZU27	‡36084F
BATTERY	—	PUZ5E-11	—	PUZ7E-10	—	PUZ7E-10	—	PUZ7E-10	—
BATTERY (C10L)	—	PUZ7E-10	—	—	—	—	—	—	—
COIL, IGNITION	8	—	—	CQ6	45036A	—	—	—	—
CONTACT BREAKER	8	—	—	CA1A	47568B	—	—	—	—
CONTROL BOX	5	—	—	—	—	RB107	37127M	RB107	37127M
GENERATOR	4	—	—	—	—	E3LM	*20013D	E3LM	*20013D
HORN	6-7	—	—	HF1235	069508	HF1234	‡069468	HF1234	069483
HORN	6-7	—	—	—	—	HF1234	†1069483	—	—
HORN PUSH	9	—	—	HP26	76207A	—	—	4A	76204A
Grommet, horn push	9	—	—	—	572039	—	—	—	—
HORN PUSH AND DIPPER SWITCH ...	9	—	—	—	—	25SA	31563D	—	—
LAMPS									
Head									
Home, dip left	6-7	—	—	MCH52	51890A	SS700P	51853A	SSU700P	51854A
Export, vertical dip (except destinations listed)	6-7	—	—	MCH52	51845B	SS700P	51683A	SSU700P	51686A
Export, Europe (not France)	6-7	—	—	MCH52	51846A	SS700P	51684B	SSU700P	51788A
Export, France	6-7	—	—	MCH52EF	51847B	SS700PEF	51685D	SSU700PEF	51632A
Side car	10-11	—	—	—	—	569	52268D	—	—
Stop tail, number plate and reflex ...	5	—	—	564	53432B	564	53432B	564	53432B
MAGNETO (Competition)	3	—	—	—	—	KNC1	42348D	KNC1	42348D
MAGNETO (Racing)	3	—	—	—	—	KNR1	42123L	KNR1	42123L
MAGDYNO	4	—	—	—	—	MO1	46043B	MO1	46043B
RECTIFIER	8	—	—	—	—	—	—	—	—
SUPPRESSOR	5	WS5	78106A	WS5	78106A	WS5	78106A	WS5	78106A
SWITCHES									
Dipper	9	—	—	99	31549A	—	—	99	31549A
Lighting	9	—	—	—	—	U39	31340A	U39	‡31340A
Lighting and ignition	9	—	—	PRS8	31443E	—	—	—	—
Knob	9	—	—	—	318346	—	—	—	—
Stop lamp	9	—	—	22B	31437B	22B	†31437B	22B	31437B
Stop lamp	9	—	—	—	—	54C	‡31281B	—	—
CABLE HARNESS	—	—	—	—	863125	—	837401	—	837771
							†837421		

§ Rigid frame

† Spring frame

‡ Swinging Arm Models

* Part of Magdyno

‡ Part of Headlamp

UNIT	For details or illustrations see Page No.	* A7 Models & A10 Golden Flash		A10 Road Rocket		Sunbeam S7 & S8	
		Model	Part No.	Model	Part No.	Model	Part No.
AMMETER	8	CZU27	36084F	CZU27	‡36084F	CZU27	36088F
BATTERY	—	PUZ7E-10	—	PUZ7E-10	—	PUZ7E-9	—
COIL, IGNITION	8	—	—	—	—	CQ	45036A
CONTROL BOX	5	RB107	37127M	RB107	37127M	MCR2	37097B
DISTRIBUTOR	8	—	—	—	—	D1A2	40073
GENERATOR	5	E3L	20010K	E3L	20010K	MC45L	20151D
HORN	6-7	HF1235	*069467	—	—	HF1234	069428
HORN	6-7	HF1234	*069482	HF1234	069482	—	—
HORN PUSH AND DIPPER	9	25SA	31563D	25SA	31563D	4A	‡76206B
LAMPS							
Head							
Home dip left	6-7	SS700P	51853A	SSU700P	51854A	—	—
Export, vertical dip (except destinations listed)	6-7	SS700P	51683A	SSU700P	51686A	MS142-1	50353E
Export, Europe (not France)	6-7	SS700P	51684B	SSU700P	51788A	—	—
Export, France	6-7	SS700PEF	51685D	SSU700PEF	51632A	MS142-1EF	056546
Stop tail, number plate and reflex ...	5	564	53432B	564	53432B	564	53432A/B
MAGNETO	3	K2F	42248E	K2F	42263D/E	—	—
Auto advance unit	3	—	47503D/E	—	—	—	—
MAGNETO	3	K2F	‡42263D/E	—	—	—	—
SWITCHES							
Dipper	9	—	—	—	—	99	31220B
Lighting	9	U39	31340A	U39	‡31340A	—	—
Lighting and ignition	9	—	—	—	—	PLC6	34017B
Magneto cut out	9	4A	76204A	4A	76204A	—	—
Stop lamp	9	22B	*31437B	22B	31437B	54C	31281B
Stop lamp	9	54C	*31281B	—	—	—	—
CABLE HARNESS	—	—	†837421	—	838551	—	994341
CABLE HARNESS	—	—	*837411	—	—	—	—


* Spring frame Models

§ A7 Shooting Star

|| Horn push only

‡ Swinging arm Models

‡ Part of Headlamp

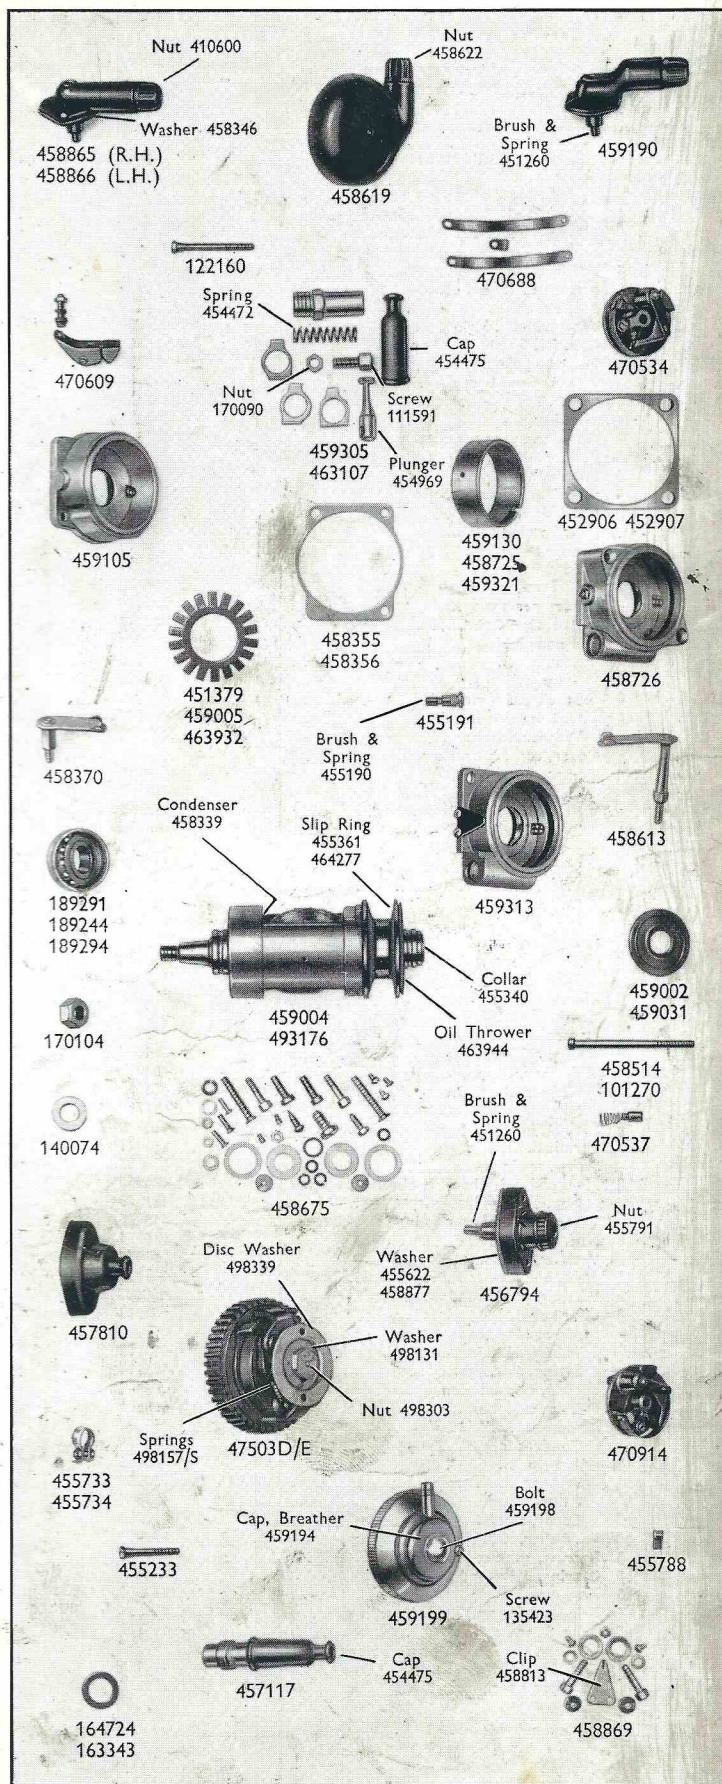

R.H.—Right Hand

L.H. — Left Hand

MAGNETO


Detailed Parts	Model Ordering No.	K2F 42248E	K2F 42263D
\$Pick up, right hand	458865	459190
\$Pick up, left hand	458866	459190
Washer, seating	458346	458346
Brush and spring	451260	451260
Nut, moulded	410600	410600
\$Cover, contact breaker end	458619	458619
Nut, moulded	458622	458622
Screw, contact breaker fixing	122160	122160
\$Contact breaker	470534	470534
Bush, insulating, centre of contact breaker	470555	470555
Bush, insulating, contact screw block	470684	470684
Contact set	470609	470609
Spring set, actuating	470688	470688
Brush and spring	470537	470537
\$Control parts set	—	463107
Spring	—	454472
Screw, adjusting	—	111591
Nut, adjusting screw	—	170090
Cap, rubber	—	454475
Clip, cup	—	455734
Washer, barrel seating	—	163343
Plunger	—	454969
\$Cam	459130	458725
\$Plate, with bearing ring	459105	458726
\$Cup, bearing insulating	451379	451379
Screw, cam fixing	463931	463931
Pin, special, cam timing screw	186060	186060
\$Spring and pin, contact breaker cover	458613	458613
Washer, .003" end plate packing	458355	458355
Washer, .005" end plate packing	458356	458356
\$Nut, shaft	—	170104
Washer, shaft	—	140074
\$Armature	459004	459004
\$Slip ring	455361	455361
Bolt, through fixing	458514	458514
Condenser	458339	458339
Oil thrower	463944	463944
Washer, linen, slip ring to oil thrower	164334	164334
Collar, steel, bearing retaining	455340	455340
\$Bearing, contact breaker end	189291	189291
\$Bearing, drive end	189244	189244
\$Cup, bearing insulating, drive end	459005	459005
\$Oil seal, drive end	459002	459002
\$Brush, spring and holder, earth	455191	455191
\$Brush and spring	455190	455190
Washer, fibre, earth brush holder	164680	164680
\$Spring and pin, pick up	458370	458370
\$Sundry parts set	458675	458675

AUTO ADVANCE UNIT

Detailed Parts	Ordering No.	47503D/E	—
Washer, cover clip	498131	—
Washer, disc cover	498339	—
\$Spring set	498157/S	—
Nut, fixing	498303	—

MAGNETO


Detailed Parts	Model Ordering No.	KNR1 42123L	KNR1 42348D
\$Cover, rubber pick up	457810	457810
Clip, pick up cover	455733	455733
\$Pick up assembly	456794	456794
Brush and spring	451260	451260
Nut, moulded	455791	410600
Washer, pick up seating	455622	458877
\$Cover, contact breaker	459199	459199
Ring, rubber	—	457681
Screw, drain plug	—	135423
Bolt, centre fixing	—	459198
Cap, breather	459194	459194
Screw, contact breaker	455233	455233
\$Contact breaker	470914	470534
Contact set	—	470609
Brush and spring earth	470537	470537
Springs, set actuating	—	470688
Bush, insulating, centre of contact breaker	—	470555
Bush, insulating, contact screw block	—	470684
\$Control parts set	457117	459305
Spring	—	454472
\$Cap, rubber	454475	454475
Clip, cap	—	455734
Washer, barrel seating	164724	164724
Plunger	—	454969
Nipple	455788	455788
Screw, adjusting	—	111591
Nut, adjusting screw	—	170090
Clip, cover, locking	458813	—
\$Plate, contact breaker end	—	459313
Cup, bearing, insulating	—	463932
Shim, contact breaker end (.003")	—	452906
Shim, contact breaker end (.005")	—	452907
Screw, cam fixing	—	463931
Pin, special, cam timing	—	186060
\$Cam	—	459321
\$Nut shaft	170104	170104
Washer, shaft	140074	140074
\$Armature	—	493176
\$Slip ring	—	464277
Bolt, through fixing	—	101270
Oil thrower	—	463944
Collar, steel bearing retaining	—	455340
\$Bearing, drive end	—	189294
\$Oil seal, drive end	—	459031
\$Cup, bearing, insul., drive end	—	463932
\$Brush, spring and holder, magneto earth	455191	455191
\$Brush and spring, magneto earth	455190	455190
\$Sundry parts set	458869	458869

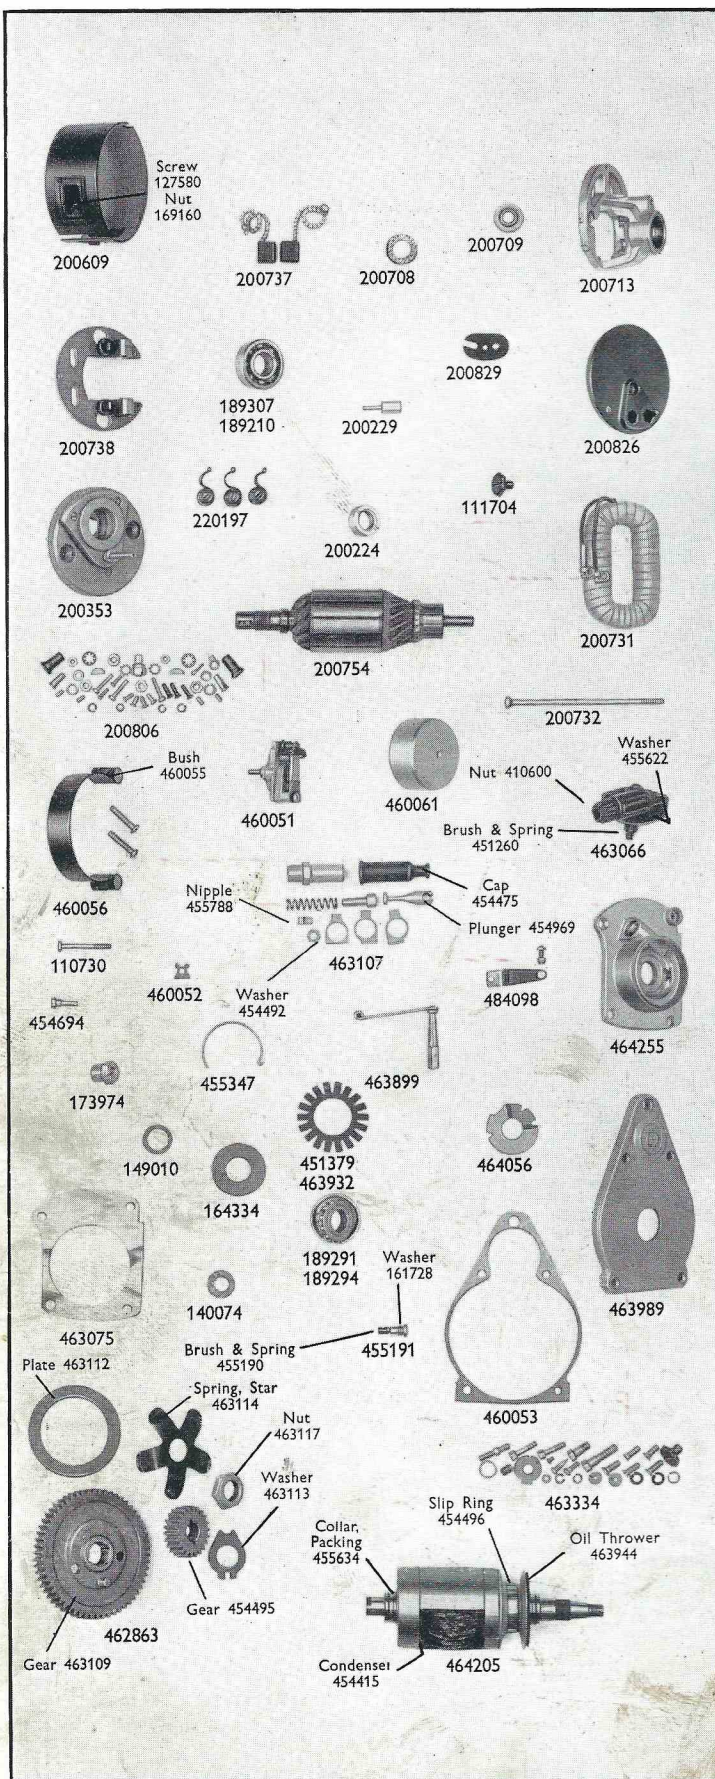

MAGDYNO

Model Ordering No.	MO1L 46043B
Detailed Parts	
§ GENERATOR	20013D/J
§ Cover, band	200609
§ Screw, cover band fixing	127580
§ Nut, cover band fixing screw	169160
§ Brushes, set	200737
§ Bracket or frame, commutator end	200713
§ Bearing	189210
§ Washer, felt bearing	200708
§ Cup, felt bearing washer	200709
§ Insulating plate	200738
§ Spring set, brush tension	220197
§ Cover, commutator end	200826
§ Terminal pin	200229
§ Plate, clamping terminal	200806
§ Bearing, drive end	189307
§ Bracket or frame, drive end	200353
§ Screw, end gear retaining	111704
§ Gear, driving	454495
§ Nut, bearing retaining	200224
§ Armature	200754
§ Field coils, set	200731
§ Bolt, through fixing	200732
§ Sundry parts set	200806
§ MAGNETO, COMPLETE	464247
§ Strap assembly	460056
§ Bush	460055
§ Pick up	463066
§ Brush and spring	451260
§ Nut, moulded	410600
§ Washer, langite	455622
§ Cover, contact breaker	460061
§ Contact breaker	460051
§ Plate, carrier insulating	460065
§ Bush, insulating, carrier fixing screw	463983
§ Bush, insulating, centre of contact breaker	460066
§ Screw, special, hollow, carrier fixing	460067
§ Wick, felt	460068
§ Contact set	484098
§ Screw, contact breaker fixing	110730
§ Washer, locking, contact breaker fixing screw	460052
§ Tappet, contact point actuating	464092
§ Ring, jump, cam fixing	455347
§ Cam	464056
§ Control parts	463107
§ Cap, rubber	454475
§ Washer, barrel, locking	454492
§ Plunger	454969
§ Nipple, cable	455788
§ Spring pin	463899
§ Terminal, earthing	186471
§ Screw, sealing	454694
§ Plate end, with bearing outer race	464255
§ Cup, bearing insulating	451379
§ Washer, end plate packing	463075
§ Nut, shaft	173974
§ Washer, shaft nut	140074
§ Plate, end	463989
§ Washer, paper, end plate	460053
§ Gear set	462863
§ Nut, gear fixing	463117
§ Washer, locking, gear fixing nut	463113
§ Spring, star, gear clutch	463114
§ Plate, gear friction	463112
§ Gear, celeron	463109
§ Armature	464205
§ Condenser	454415
§ Slip ring	454496
§ Washer, linen	164334
§ Oil thrower	463944
§ Collar, steel, bearing packing	455634
§ Washer, "005" bearing packing	149010
§ Bearing, contact breaker end	189291
§ Bearing, drive end	189294
§ Key, woodruff	189386
§ Brush, spring and holder, earth	455191
§ Brush and spring	455190
§ Washer, fibre, earth brush holder	161728
§ Cup, bearing insulating	463932
§ Sundry parts set	463334

§ Recommended stock item

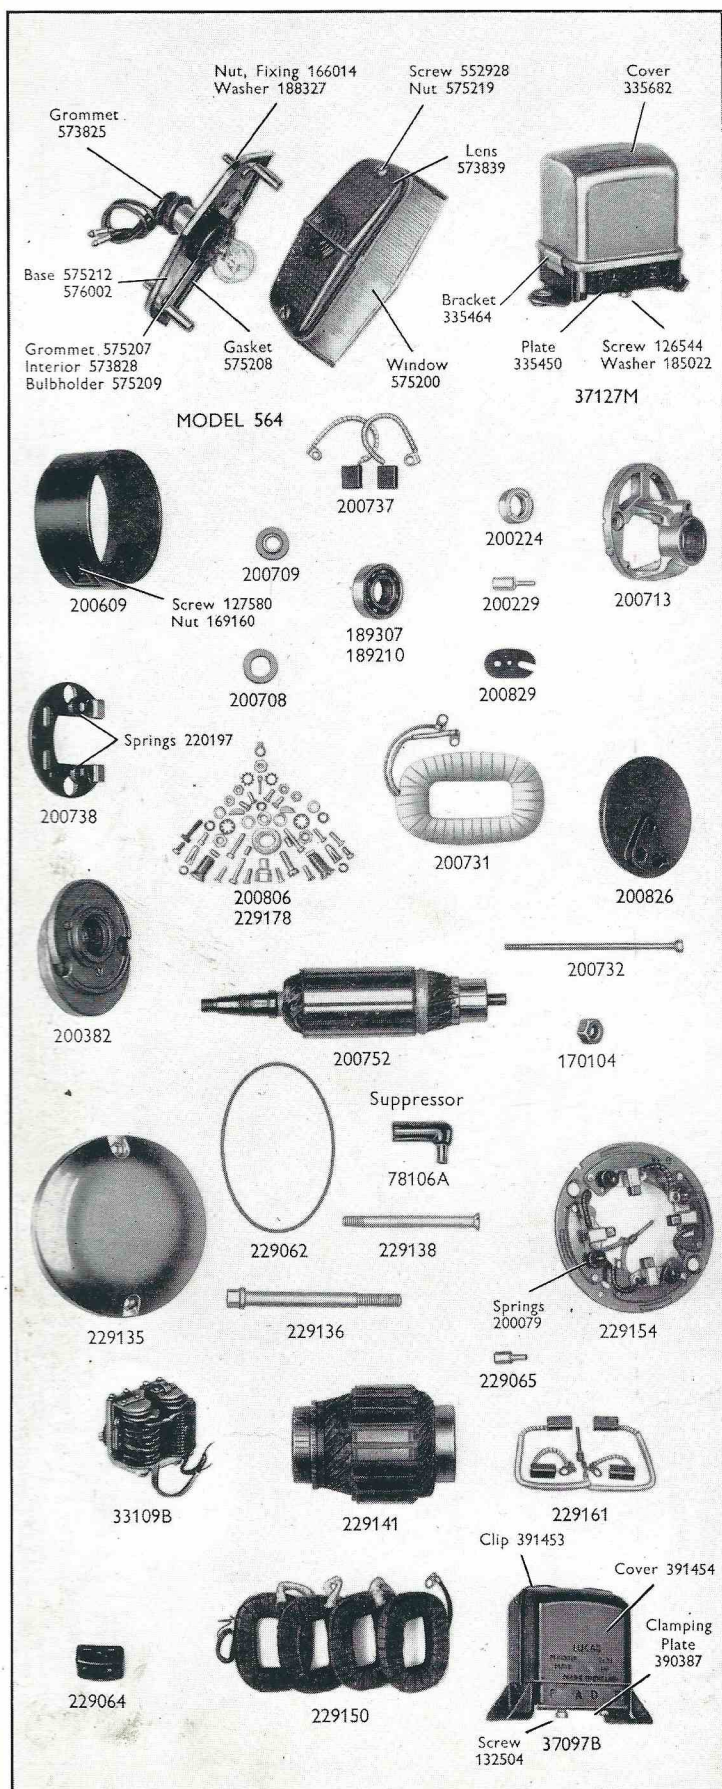

STOP TAIL, NUMBER PLATE & REFLEX LAMP

Model Ordering No.	564 53432A	564 53432B
Detailed Parts		
§ Lens	573839	573839
§ Screw, lens retaining	552928	—
§ Washer, retaining screw	161385	—
§ Window	575200	575200
§ Base assembly	575212	576002
§ Bulbholder assembly (shell)	575209	575209
§ Grommet, bulbholder	575207	575207
§ Interior, bulbholder	573828	573828
§ Gasket, lens seating	575208	575208
§ Grommet, cable	573825	573825
§ Bulb	384	384
§ Washer, fixing bolt spacer	131023	131023
§ Nut, lamp fixing	166014	166014
§ Washer, fixing nut	188327	188327
§ Nuts, lens retaining	—	575219

CONTROL BOX

Model Ordering No.	RB107 37127M	MCR2 37097B
Detailed Parts		
§ Cover	335682	391454
§ Bracket, cover fixing	335464	—
§ Screw, cover fixing	126544	—
§ Plate, terminal fixing	335450	390387
§ Screw, terminal plate	126544	132504
§ Washer, terminal plate screw	185022	—
§ Clip, cover fixing	—	391453
§ Regulator	—	33109B
§ Screw adjusting	390794	390794
§ Nut, screw adjusting	390529	390529
§ Screw, regulator fixing	—	100384
§ Washer, regulator fixing screw	—	185038


GENERATOR

Model Ordering No.	E3L 20010K
Detailed Parts	
§ Cover band, assembly	200609
§ Screw, cover band fixing	127580
§ Nut, cover band fixing screw	169160
§ Brushes, set	200737
§ Bracket or frame, commutator end	200713
§ Bearing	189210
§ Washer, felt, bearing	200708
§ Cup, felt bearing washer	200709
§ Insulating plate, with brush boxes	200738
§ Spring set, brush tension	220197
§ Cover assembly	200826
§ Terminal pin	200229
§ Plate, clamp terminal	200829
§ Bearing, drive end	189307
§ Bracket or frame, drive end	200382
§ Nut, shaft	170104
§ Washer, shaft nut	140074
§ Nut, bearing retaining	200224
§ Armature assembly	200752
§ Field coils set	200731
§ Bolt, through fixing	200732
§ Sundry parts set	200806

GENERATOR

Model Ordering No.	MC45L 20151D
Detailed Parts	
§ Cover	229135
§ Ring, rubber, cover seating	229062
§ Bolt, dynamo fixing	229138
§ Bracket or frame	229154
§ Spring set, brush tension	200079
§ Brushes, set	229161
§ Armature	229141
§ Bolt, armature fixing	229136
§ Terminal block	229064
§ Terminal	229065
§ Field coils set	229150
§ Plate, terminal clamping	200829
§ Sundry parts set	229178

§ Recommended stock item

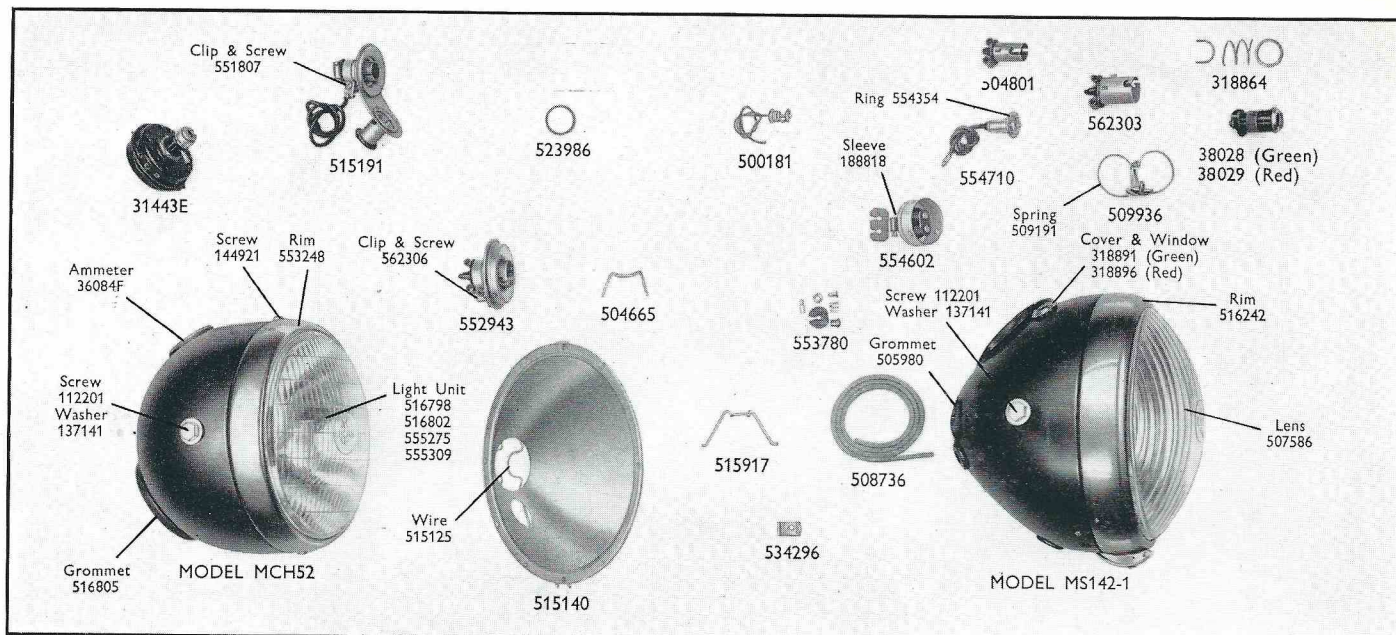


HEADLAMPS	Export (except destinations listed) Vertical Dip	Export, Europe not France	Export, France	Home Dip Left	HEADLAMPS	Home & Export (except France)	Export, France
Model Ordering No.	MCH52 51845B	MCH52 51846A	MCH52EF 51847A	MCH52 51890A	Model Ordering No.	MS142-1 50353E	MS142-1EF 056546
Detailed Parts							
Rim or door ...	553248	553248	553248	553248	Rim or door ...	516242	516242
Wire, fixing ...	504665	504665	504665	504665	Wires, fixing ...	515917	515917
Screw, rim fixing ...	144921	144921	144921	144921	Bead ...	508736	508736
Light unit ...	516798	555275	516802	555309	Lens ...	507586	—
Plate, rim fixing ...	534296	534296	534296	534296	Backshell ...	515191	—
Backshell ...	—	—	552943	—	Bulbholder, main ...	504801	—
Bulbholder, main ...	554602	554602	562303	554602	Sleeve, terminal ...	188818	—
Sleeve, terminal ...	188818	188818	188818	188818	Clip and screw, bulbholder ...	551807	—
Clip and screw, bulbholder ...	—	—	562306	—	Interior, bulbholder, pilot ...	500181	—
Ring, bulbholder pilot ...	554354	554354	554354	554354	Reflector ...	515140	—
Bulbholder, pilot ...	554710	554710	554710	554710	Wire, backshell fixing ...	515125	—
Interior, pilot ...	553780	553780	553780	553780	Bulb, main ...	166	—
Bulb, main ...	166	377	—	373	Bulb, pilot ...	200	—
Bulb, pilot ...	988	988	988	988	Warning light, red ...	38029	38029
Screw, body fixing ...	112201	112201	112201	112201	Warning light, green ...	38028	38028
Nut, body fixing screw ...	187110	187110	187110	187110	Set of fixing parts ...	318864	318864
Washer, body fixing ...	137141	137141	137141	137141	Cover and window (green) ...	318891	318891
Ammeter ...	36084F	36084F	36084F	36084F	Cover and window (red) ...	318896	318896
Ring, rubber ...	523986	523986	523986	523986	Bulb ...	970	970
Nut, terminal ...	166043	166043	166043	166043	Nut, terminal ...	180170	180170
Washer, terminal ...	185022	185022	185022	185022	Washer, terminal ...	185022	185022
Body ...	516816	516816	516816	516816	Catch, rim fixing ...	509936	509936
Grommet, body ...	516805	516805	516805	516805	Spring, rim catch ...	509191	509191
† Switch (for details see page 6)	31443E	31443E	31443E	31443E	Screw, lamp fixing ...	112201	112201
					Washer, lamp fixing ...	137141	137141
					§ Bush, rubber ...	505980	505980
					Body ...	516240	516240

HORNS (For illustrations see page 7)

Model Ordering No.	HF1234 069428	HF1235 069467	HF1234 069468	HF1234 069482	HF1234 069483	HF1235 069508
Detailed Parts						
§ Bracket ...	701639	700168	701686	703349	700168	703396
Tone disc ...	703339	703339	703339	703339	703339	703339
Nut, tone disc ...	178931	178931	178931	178931	178931	178931
Screw, bracket fixing (1/4" B.S.F.) ...	145481	141666	145481	145481	145481	141666
Screw, cover fixing ...	145491	144500	145491	145491	145491	144500
§ Diaphragm ...	703988	703988	703988	703988	703988	703988
Nut, diaphragm fixing ...	184000	184000	184000	184000	184000	184000
Washer, diaphragm packing ...	700238	700238	700238	700238	700238	700238
§ Contact set ...	703233	703233	703233	703233	703233	703233
Terminal block ...	703004	703004	703004	703004	703004	703004
§ Sundry parts set ...	703235	703235	703235	703235	703235	703235

† Order separately

§ Recommended stock item

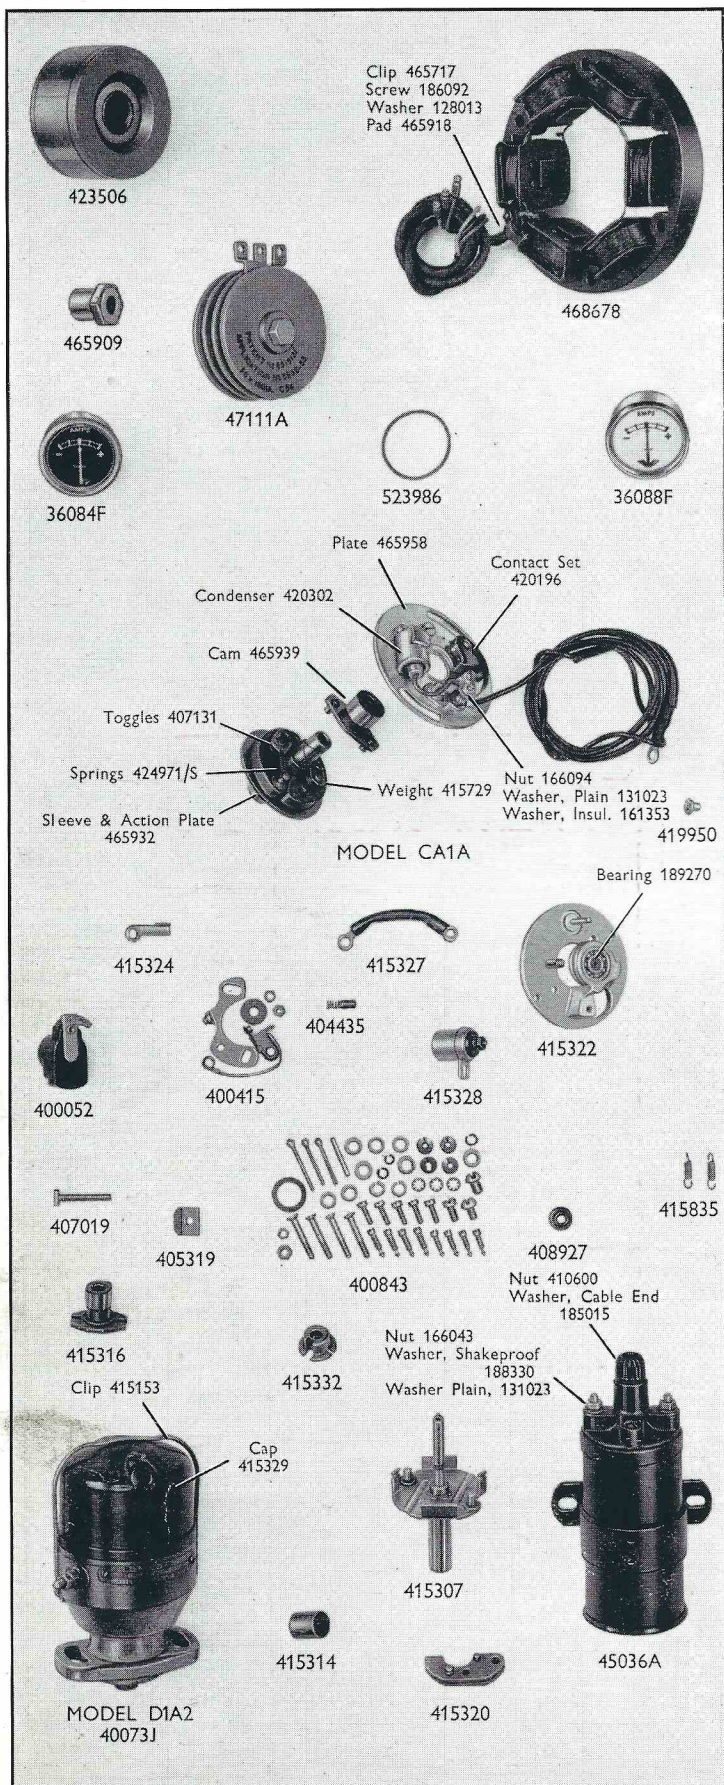

ALTERNATOR

Model Ordering No.	RM13/15 *047523
Detailed Parts	
Rotor	423506
§Stator assembly	468678
Pad, insulating	465918
Clip, cable	465717
Screw, cable clip fixing	186092
Washer, fixing screw	128013
Nut, locking	465909
Washer, locking	465910

AMMETER

Model Ordering No.	CZU27 36084F	CZU27 36088F
Detailed Parts		
§Ring, rubber	523986	523986
§Nut, terminal	166043	166043
§Washer, terminal	185022	185022

CONTACT BREAKER UNIT

Model Ordering No.	CA1A 47568B
Detailed Parts	
Plate assembly	465958
Nut, terminal	166094
Washer, terminal, plain	131023
Washer, terminal, insul.	161353
§Contact set	420196
Bush, insul. terminal	419950
§Condenser	420302
§Cam	465939
§Springs set, auto advance	424971/S
§Toggles	407131
§Weight assembly	415729
§Sleeve and action plate assembly	465932

DISTRIBUTOR


Model Ordering No.	D1A2 40073J
Detailed Parts	
§Cap, distributor	415329
§Brush and spring	404435
§Rotor arm	400052
Sleeve, rotor arm drive	415332
§Condenser	415328
§Base, contact breaker	415322
§Terminal, low tension	407019
Bush insul. low tension terminal	408927
Plate, insul., low tension terminal	405319
§Contact set	400415
§Connector, low tension terminal	415324
§Connector, condenser to pillar	415327
§Bearing, cam shaft	189270
§Cam	415316
§Spring set	415835
§Weights	415320
§Shaft and action plate	415307
§Clip, cover retaining	415153
§Bushing, bottom	415314
§Sundry parts set	400843

IGNITION COIL

Model Ordering No.	CQ6 45036A
Detailed Parts	
§Nut, terminal moulded	410600
§Washer, split cable end	185015
Nut, switch and contact breaker terminals	166043
Washer, shakeproof	188330
Washer, plain	131023

§ Recommended stock item.

* For reference only. Serviced by Rotor and Stator Assembly

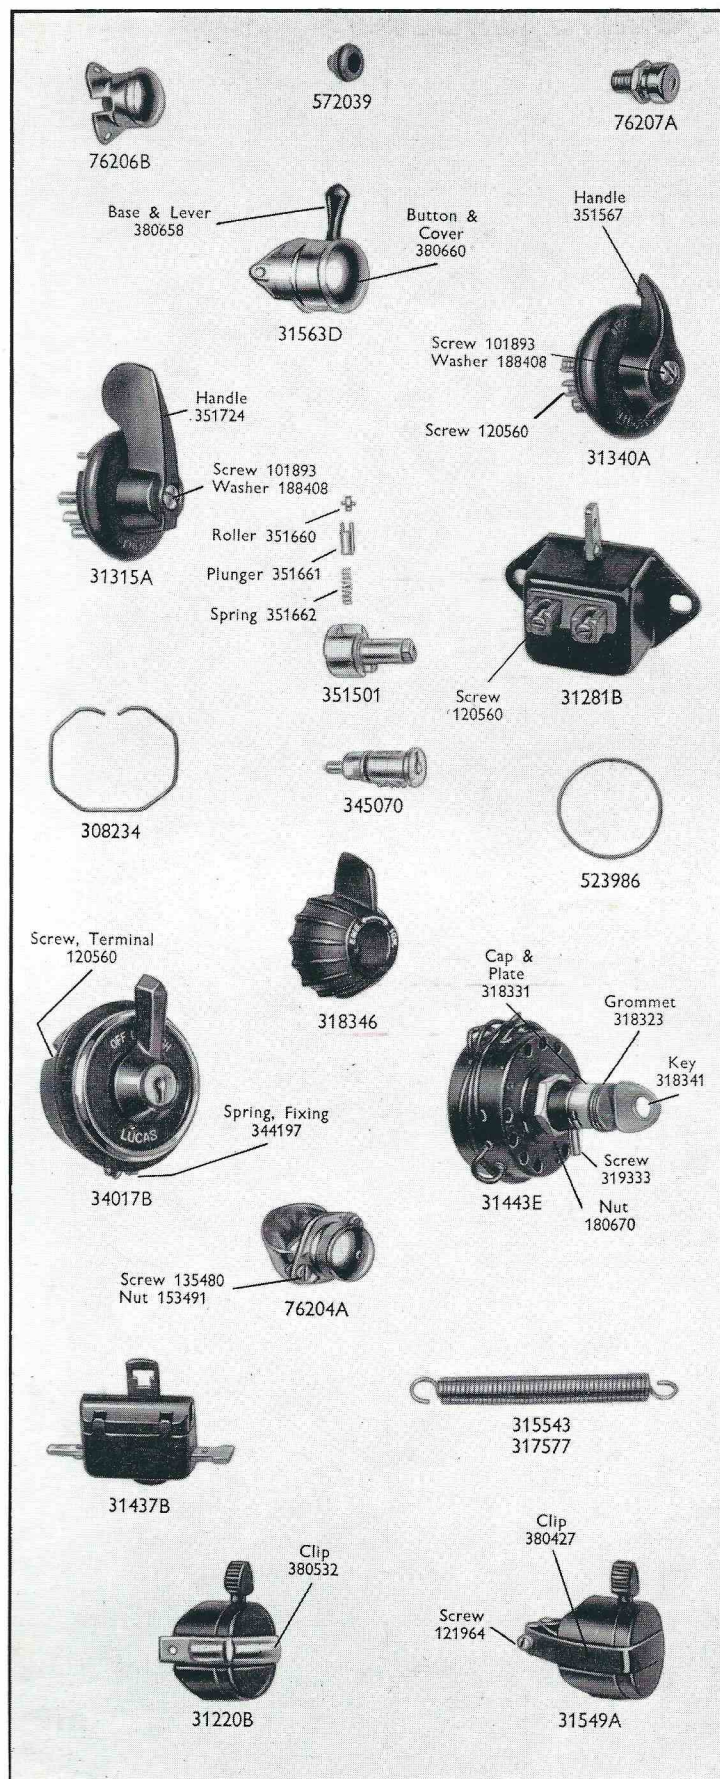

HORN PUSH				
Model Ordering No.		4A 76204A	4A 76206B	HP26 76207A
Detailed Parts				
§Screw, terminal	119520	119520	—
Screw, fixing	135480	135480	—
Nut, fixing	153491	—	—
†Grommet	—	—	572039
HORN PUSH AND DIPPER SWITCH				
Model Ordering No.		255A 31563D		
Detailed Parts				
Button and cover	380660		
Base and lever	380658		
§Screw, terminal	120610		
LIGHTING SWITCH				
Model Ordering No.		U39 31315A	U39 ††31340A	
Detailed Parts				
§Handle, with fixing screw	351724	351567	
Screw, handle fixing	101893	101893	
Shaft head piece	351501	351501	
Roller, contact	351660	351660	
Plunger, contact	351661	351661	
Spring, plunger	351662	351662	
§Screw, terminal	120560	120560	
Spring, switch fixing	308234	308234	
§Ring, rubber, switch fixing	523986	523986	
§Washer, locking, handle fixing	188408	188408	
Nut, contact stud	166103	166103	
LIGHTING AND IGNITION SWITCH				
Model Ordering No.		PLC6 34017B	PRS8 31443E	
Detailed Parts				
§Key	—	318341	
§Screw, terminal	120560	120584	
Screw, knob fixing	—	319333	
Grommet	—	318323	
Rotor assembly (lighting)	—	313053	
Terminal, lighting	—	318349	
Rotor assembly (ignition)	—	313052	
Terminal, ignition	—	318316	
Nut, fixing	—	180670	
Cap and plate assembly	—	318331	
Screw, body fixing	—	198887	
Nut spindle	—	169290	
Lock	345070	—	
Spring	344197	—	
†Knob	—	318346	
MAGNETO CUTOOUT SWITCH				
Model Ordering No.		4A 76204A		
Detailed Parts				
§Screw, terminal	119520		
§Screw, fixing	135480		
§Nut, fixing	153491		
STOP LAMP SWITCH				
Model Ordering No.		22B 31437B	54C 31281B	
Detailed Parts				
§Screw, terminal	—	120560	
†Spring, 3½" long	315543	315543	
†Spring, 3" long	317577	—	
DIPPER SWITCH				
Model Ordering No.		99 31220B	99 31549A	
Detailed Parts				
§Screw, fixing	136291	121964	
Clip	380532	380427	

†† Complete switch is superseded by 31315A

§ Recommended stock item † Order separately

LATER INFORMATION

B.S.A. "DANDY"

EQUIPMENT SPECIFICATION

HORN, HF1950	*70145D	HEADLAMP (continued)	060185
Screw, terminal	106483	Catch, rim fixing	612217
		Spring, rim fixing catch	612218
HORN PUSH, 40SA	*76230A	Screw, lamp fixing	112200
Pad, rubber	380459	Washer, fixing screw	137141
		Sleeve, terminal	188818
		Cable harness	839001
		Body	556130
HORN PUSH (later—clip fixing), 40SA ...	76232A	HEADLAMP (models with Lucas ignition),	
Clip, fixing	762229	MCH62	58082A
Nut, fixing clip	153490	Rim	517187
Screw, fixing clip	135480	Screw, rim fixing	144921
		Plate, rim fixing screw	534296
MAGNETO, 6F1	047525A	Lens	656105
Flywheel	468819	Bead, lens seating	656118
Cam	469034	Reflector	517205
Stator	42360A/B	Screw, reflector fixing	186136
Spring, contact breaker	468890	Washer, reflector fixing	128433
Bush, insulating	468801	Bulbholder	656132
Contact set	468992	Spring, bulbholder retaining	656125
Lead, condenser to C/Breaker	468686	Bulbholder, pilot	655581
Condenser, connector	468804	Bulb, main	386
Condenser	421748	Bulb, pilot	974
Cover, rubber, condenser	421569	Sleeve, terminal	188152
Plate, coil retaining, L.H.	468604	Switch, main	31634
Plate, coil retaining, R.H.	468763	Knob	351788
Coil, high tension	468603	Screw, knob fixing	105751
Moulding, insulated, H.T. coil	468762	Washer, knob fixing	188408
Sundry parts, set	468994	Screw, terminal	122636
		Shaft, headpiece	351794
SUPPRESSOR WS5	78106A	Roller, contact	351660
HEADLAMP (first 400 models), M35 ...	*060185	Plunger, contact	351661
Rim	*556129	Spring, contact plunger	351662
Wire, lens retaining	600308	Lever, contact	351528
Gasket, lens seating	612220	Switch, dip	31620
Lens	612235	Screw, terminal	120560
Reflector	612172	Screw, lamp fixing	516856
Bulbholder	612171	Nut, lamp fixing	187110
Bulbholder, pilot	608025	Washer, lamp fixing	137497
Bulb, main	180	Grommet, cable	199001
Bulb, pilot	974	Body	517276
Switch, lighting	31671	TAIL LAMP, 590	53555A/B
Handle, with fixing screw	351567	Lens	526563
Screw, fixing	101893	Nut, lens fixing	526567
Shaft, headpiece	351579	Rubber, lens seating	526565
Roller, contact	351660	Base, assembly	526568
Plunger, contact	351661	Bulbholder, rubber	526569
Spring, contact plunger	351662	Washer, interior, bulbholder	125533
Screw, terminal	120560	Bulb	990
Spring, switch fixing	308234	Earth strip	526471
Ring, rubber, switch fixing	523986	Nut, lamp fixing	166014
Washer, locking, handle fixing screw ...	188408	Washer	188327
Switch, dipper	31620		
Screw, terminal	120560	CABLE HARNESS (models with Lucas ignition)	863745
Sleeve, terminal	188152		

SIDE CARS

LAMP, 569	52268D	LAMP (continued)	52268D
Cover	526514	Bulb	951
Screw, cover fixing	145231	Grommet, fixing bolt	526520
Lens, red	526521	Nut, fixing bolt	181261
Lens, clear	526522	Washer, fixing bolt	188350
Body, rubber	526513	Washer, lamp seating	146240
Bulbholder and bracket	526518	Bolt, lamp fixing	520325
Interior, bulbholder	553780	Plate, locking, fixing bolt	526519

B.S.A. "DANDY"

