

HINTS AND TIPS ON — SERVICE —

For **BSA** and **ARIEL** Dealers

Service Bulletin #189


April 28, 1965

SUBJECT: THROTTLE CABLE ADJUSTMENT SCREW TENSION SPRING
A65-2L - A50-2C AND A50-2CC MODELS

A tension spring can be assembled on the throttle cables on the dual carburetor models to prevent them from getting out of adjustment after they are set properly.

INSTRUCTIONS:

1. Remove the top from the body of the carburetor.
2. Remove the throttle slide clip from the end of the cable.
3. Pull the cable out of the slide, spring and carburetor top.
4. Remove the adjusting screw from the carburetor top.
5. Slide the tension spring over the adjusting screw and assemble it back into the carburetor top.
6. Reassemble the throttle slide spring, throttle slide and cable clip.
7. Reassemble the throttle slide into the carburetor body and tighten the carburetor top in place.
8. Adjust the throttle cables to obtain even idling on both cylinders. See the Amal Leaflet, List No. 102/3 for detailed instructions on Timing Twin Engines with Dual Carburetors.

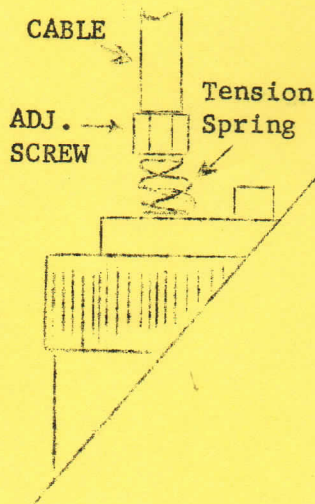

NOTE: This Amal Leaflet is included in the service material supplied with every new motorcycle.

PARTS REQUIRED:

			<u>LIST</u>
2	4/148	Tension Spring (one for each throttle cable)	.15 ea.
		(One or more coils can be ground off if the spring is too long.)	

Walter Brown
Walter Brown,
Service Manager